



Maintenance Schedule

Maintenance Schedule

| Item | Function Required | Weekly | 3 Months or 3,000 Miles | 6 Months or 6,000 Miles | 12 Months or 12,000 Miles |
|-------------------------|--|--------------|----------------------------|----------------------------|------------------------------|
| Brakes | Test that they are operational. | At Every Use | | | |
| Brake Adjustment | Adjust to proper operating clearance. | | ● | | |
| Brake Magnets | Inspect for wear and current draw. | | | ● | |
| Brake Linings | Inspect for wear or contamination. | | | | ● |
| Brake Controller | Check for correct amperage and modulation. | | | ● | |
| Brake Cylinders | Check for leaks, sticking. | | | | ● |
| Brake Lines | Inspect for cracks, leaks, kinks. | | | | ● |
| Trailer Brake Wiring | Inspect wiring for bare spots, fray, etc. | | | | ● |
| Breakaway System | Check battery charge and switch operation. | At Every Use | | | |
| Hub/Drum | Inspect for abnormal wear or scoring. | | | | ● |
| Wheel Bearings and Cups | Inspect for corrosion or wear. Clean and repack. | | | | ● |
| Seals | Inspect for leakage. Replace if removed. | | | | ● |
| Springs | Inspect for wear, loss of arch. | | | | ● |
| Suspension Parts | Inspect for bending, loose fasteners and wear. | | | ● | |
| Hangers | Inspect welds. | | | | ● |
| Wheel Nuts and Bolts | Tighten to specified torque values. | | ● | | |
| Wheels | Inspect for cracks, dents, or distortion. | | | ● | |
| Tire Inflation Pressure | Inflate tires to mfg's specifications. | ● | | | |
| Tire Condition | Inspect for cuts, wear, bulging, etc. | | ● | | |