

Item	Function Required	Weekly	3 Months or 3000 Miles	6 Months or 6000 Miles	12 Months or 12000 Miles	Refer to Page
Brakes	Test that they are operational	<i>At Every Use</i>				5 & 22
Brake Adjustment	Adjust to proper operating clearance		●			12
Brake Magnets	Inspect for wear and current draw			●		14
Brake Linings	Inspect for wear or contamination				●	15 & 31
Brake Controller	Check for correct amperage & modulation			●		11
Brake Cylinders	Check for leaks, sticking				●	26 & 31
Brake Lines	Inspect for cracks, leaks, kinks				●	31
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				●	8
Breakaway System	Check battery charge and switch operation	<i>At Every Use</i>				7
Hub/Drum	Inspect for abnormal wear or scoring				●	32
Wheel Bearings & Cups	Inspect for corrosion or wear. Clean & repack.				●	34
Seals	Inspect for leakage. Replace if removed.				●	38
Springs	Inspect for wear, loss of arch.				●	41
Suspension Parts	Inspect for bending, loose fasteners, wear.			●		41
Hangers	Inspect Welds				●	41
Wheel Nuts and Bolts	Tighten to specified torque values.		●			47
Wheels	Inspect for cracks, dents or distortion.			●		46
Tire Inflation Pressure	Inflate tires to mfg's specifications.	●				48
Tire Condition	Inspect for cuts, wear, bulging, etc.		●			49